


3M® H180 2" PISTOL GRIP DISPENSER

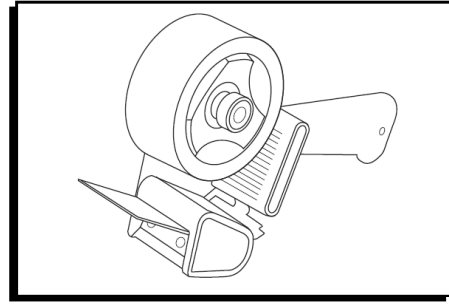

OPERATION

1. Place dispenser on flat surface. Push tape roll fully onto tape wheel. Be sure tape unwinds with sticky side down. (See Figure 1)
2. Unroll 5-6 inches of tape (sticky side down) and thread between smoothing roller and metal loading gate. (See Figure 2)
3. Pull tape over smoothing roller allowing tape to unroll freely off tape wheel. (See Figure 3) To adjust tension, see Figure 4.
4. Start desired depth on side of box. (See Figure 5)
5. Pull dispenser along the carton seam - smoothing roller automatically presses tape to the package. (See Figure 5)
6. Continue down the opposite end to desired length. In one motion, tilt dispenser forward so tape pressing wiper stops rolling tape, serrated blade cuts tape and wiper smooths the tape end. (See Figure 5)

